



PHOTOMETRIC TESTING & EVALUATION TO IES LM-79-08

Sample Tested
LEDE-A19-40-1-30D-I

Prepared for:

Evan O'Sullivan

LEDnovation, Inc.
13053 W. Linebaugh Ave.
Tampa, FL 33626

Phone: 813-891-9600

Technical Report Number
30017067-1

December 2, 2010

Prepared by:

Bryan Cubitt, Technical Team Leader

Approved by:

Steven Longo, Technical Manager



Program Description

Photometric and electrical testing of an “LEDE-A19-40-1-30D-I” replacement lamp to IES LM-79-08.

Executive Summary

Sample Tested = **LEDE-A19-40-1-30D-I**

Luminous Efficacy* (Lumens/Watt)	Luminous Flux* (Lumens)	Input Power* (Watts)	Power Factor*
64.90	380.3	5.86	0.752

CCT (K)*	CRI*	Stabilization Time (Light & Power)
3103.1	91.4	45 minutes

* The above results are recorded / derived from measurements made using an Integrating Sphere



TABLE OF CONTENTS

Sample..... 4

Test Results..... 5

Spectral Flux 6

Chromaticity Diagram 7

Flux Distribution – Zonal Lumen Summary..... 8

Illuminance Plots 9

Candela Plots 10

Candela Tabulation 11

Photometric Testing Information..... 13

Equipment List:..... 14

December 2, 2010

Sample

The following sample was submitted for evaluation:

LEDnovation, Inc. - **LEDE-A19-40-1-30D-I**




LEDE-A19-40-1-30D-I

December 2, 2010

Test Results –		
The following results were measured after stabilization of the sample in the Integrating Sphere (unless otherwise stated). Stability is reached when the variation of 3 readings of light output and electrical power, taken 15 minutes apart, is less than 0.50% (in accordance with IES LM-79-08).		
Key Photometric Results	Sample Reference	
	LEDE-A19-40-1-30D-I	
	Integrating Sphere	Goniophotometer
Luminous Efficacy (Lumens/Watt)	64.90	65.09
Total Luminous Flux (Lumens)	380.3	371.0
Total Radiant Flux (Watts)	1.16	
Correlated Color Temperature (CCT)	3103.1	
Color Rendering Index (CRI)	91.4	
Chromaticity (Chroma x / Chroma y)	0.4375 / 0.4186	
Chromaticity (Chroma u / Chroma v)	0.2449 / 0.3514	
Chromaticity (Chroma u' / Chroma v')	0.2449 / 0.5270	
D _{uv} Value	0.00557	
Stabilization Time (Light and Power)	Approx. 45 minutes	
Total Run Time – Integrating Sphere	52 minutes	
Total Run Time – Goniophotometer	95 minutes	
Spacing Criteria	NA (0° – 180°) / NA (90° – 270°)	
Electrical Input Results:	Sample Reference	
	LEDE-A19-40-1-30D-I	
	Integrating Sphere	Goniophotometer
Input Power (Watts)	5.86	5.70
Input Voltage (Volts AC)	120.0	120.0
Input Current (Amps)	0.065	0.067
Input Frequency (Hertz)	60.0	60.0
Power Factor	0.752	0.706
Additional Information	Sample Reference	
	LEDE-A19-40-1-30D-I	
Ambient Temperature	25.3°C	
Integrating Sphere Detector	CDS 600 Spectroradiometer	
Absorption Correction used?	Yes	

Spectral Flux


The following graph shows the spectral response curve of the radiant flux for the sample:

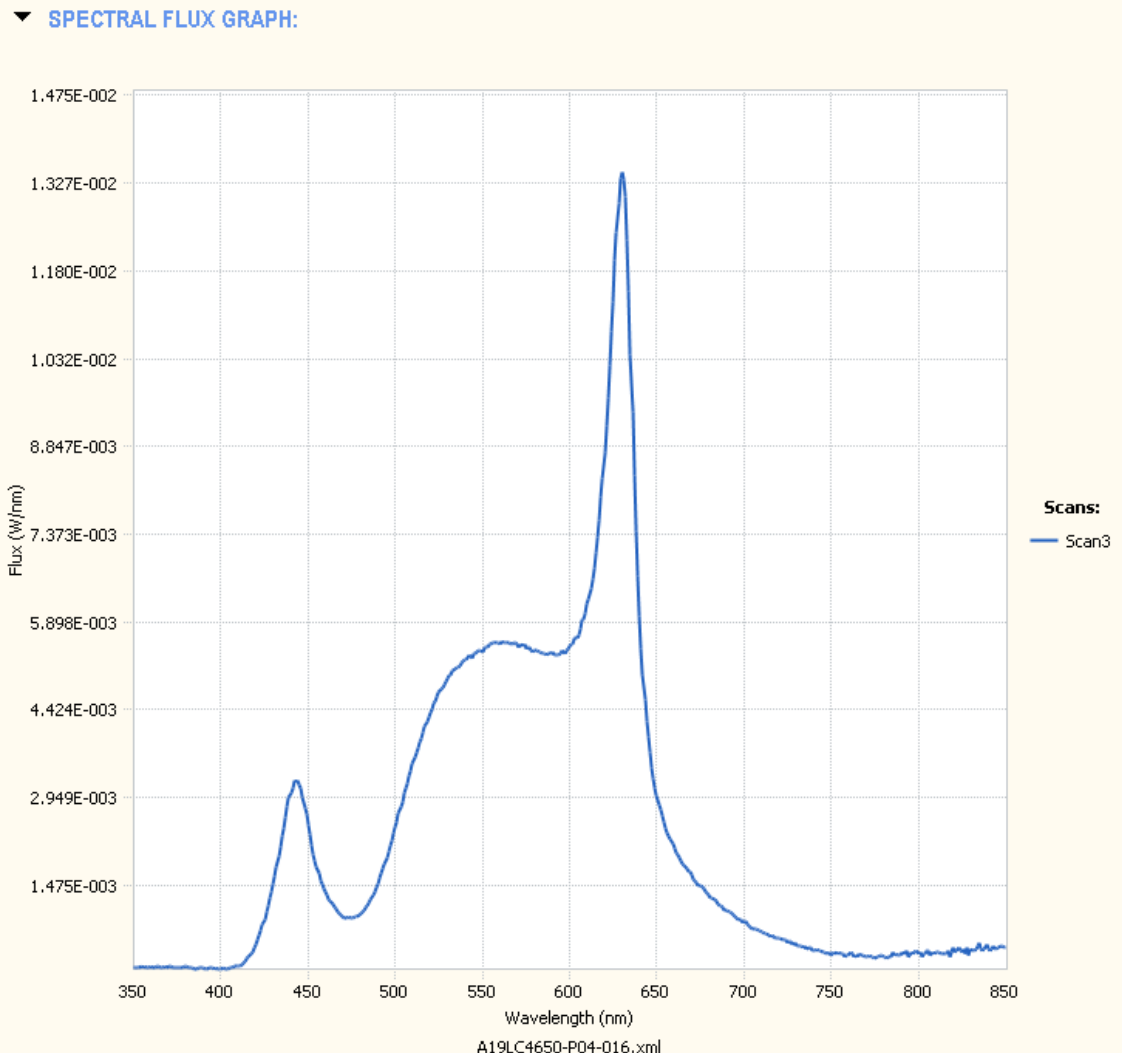

Spectral response of the Radiant Flux
(350nm to 850nm – calibrated range of the Spectroradiometer).

Chromaticity Diagram

The following image shows the chromaticity diagram for the sample:

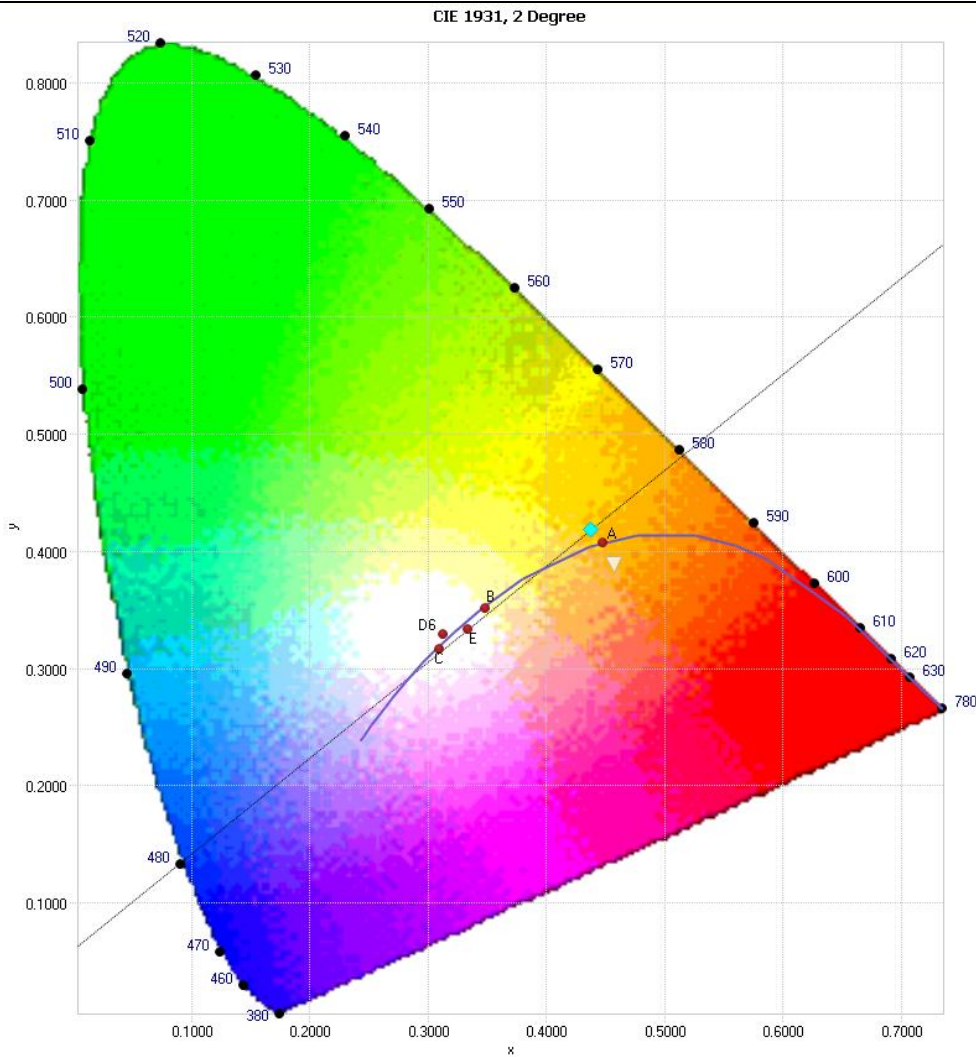

Tristimulus values (from page 5):
x / y = 0.4375 / 0.4186

The locations on the diagram of the tristimulus coordinates are indicated by the blue diamond.

Test Results – Flux Distribution – Zonal Lumen Summary

The following table depicts the zonal lumen distribution for the sample:

Zone	Lumens	% Total
0 - 10	7.6	2.0%
10 - 20	21.8	5.9%
20 - 30	33.9	9.1%
30 - 40	42.5	11.4%
40 - 50	47.2	12.7%
50 - 60	47.6	12.8%
60 - 70	44.1	11.9%
70 - 80	37.9	10.2%
80 - 90	30.1	8.1%
90 - 100	22.4	6.0%
100 - 110	15.5	4.2%
110 - 120	9.9	2.7%
120 - 130	5.8	1.6%
130 - 140	3.0	0.8%
140 - 150	1.4	0.4%
150 - 160	0.5	0.1%
160 - 170	0.1	0.0%
170 - 180	0.0	0.0%
Total	371.1 Lumens	100%

Zonal Lumen Summary

Zone	Lumens	% Lamp / Luminaire
0 - 60	200.5	54.0%
60 - 90	112.0	30.2%
0 - 90	312.5	84.2%
90 - 180	58.6	15.8%
0 - 180	371.1	100%


Test Results – Illuminance Plots

The following images depict the illuminance characteristics of the luminaire.

Illuminance at a Distance			
	Center Beam FC	Beam Width	
1.7R	28.96 fc	9.2ft	9.1ft
3.3R	7.24 fc	18.4ft	18.2ft
5.0R	3.22 fc	27.6ft	27.3ft
6.7R	1.81 fc	36.7ft	36.3ft
8.3R	1.16 fc	45.9ft	45.4ft
10.0R	0.80 fc	55.1ft	54.5ft

■ Vert. Spread: 140.1° ■ Horiz. Spread: 139.7°


Beam Angle

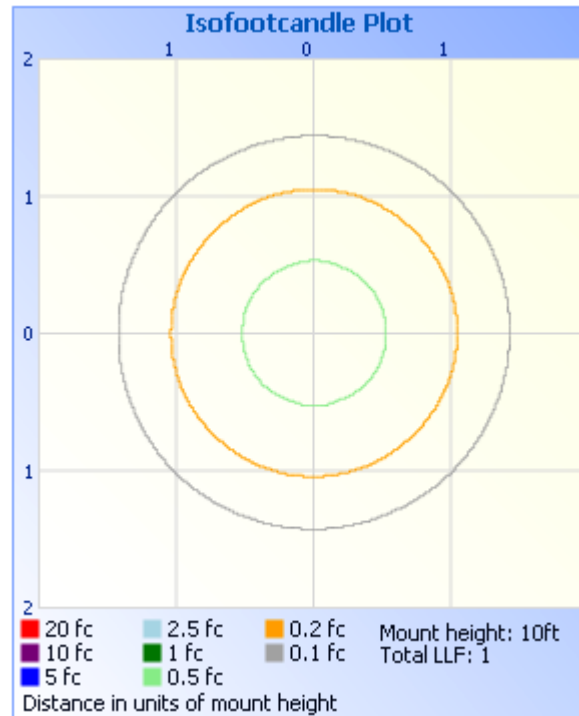


Illuminance Plot (Footcandles)

Test Results – Candela Plots

The following images depict the luminous intensity distribution characteristics of the luminaire.

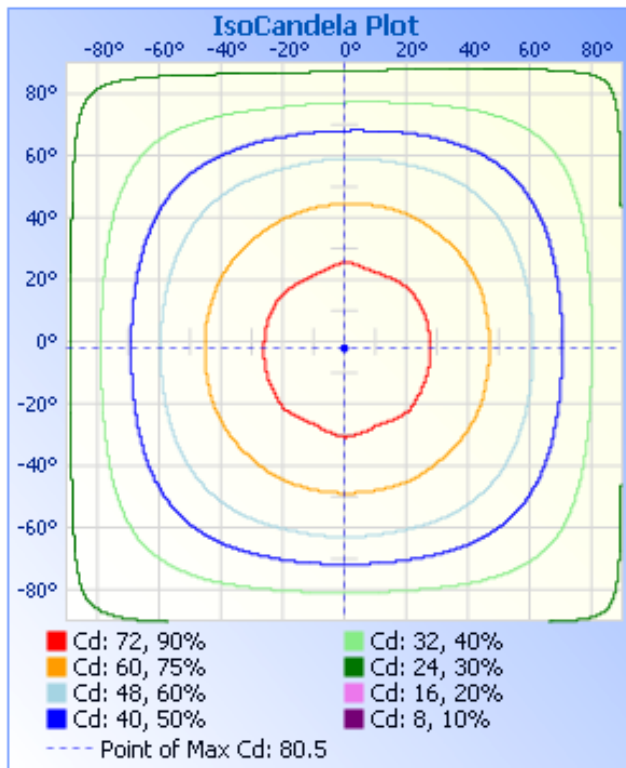

Isocandela Plot

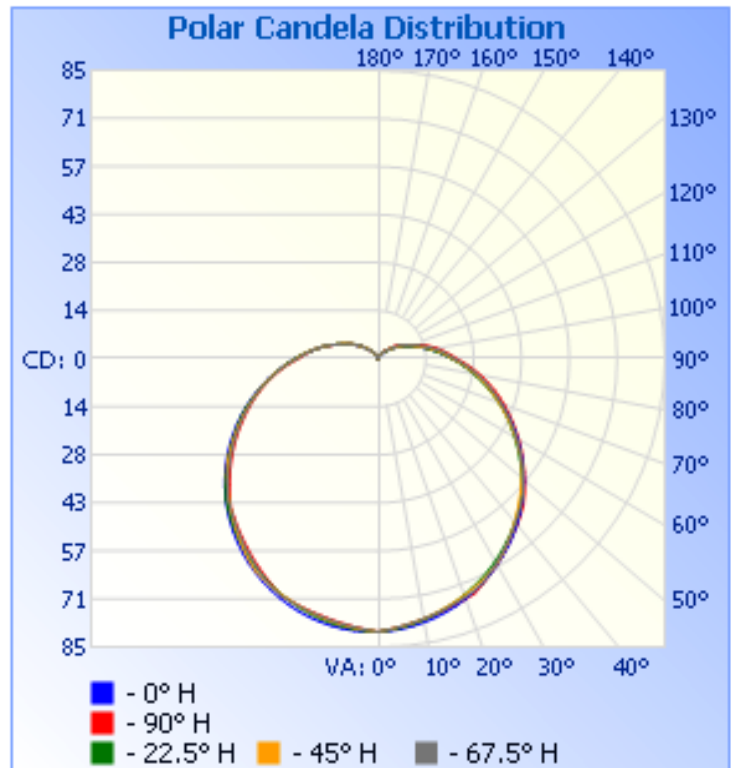

Polar Candela Distribution

Test Results – Candela Tabulation

The following table provides the tabulated Candela measurements:

	0.0	22.5	45.0	67.5	90.0	112.5	135.0	157.5	180.0	202.5	225.0	247.5	270.0	292.5	315.0	337.5	360.0
0.0	80	80	80	80	80	80	80	80	80	80	80	80	80	80	80	80	80
2.5	80	80	80	80	80	80	80	80	80	80	80	80	80	80	80	80	80
5.0	80	79	79	79	79	79	80	80	80	80	80	79	79	79	79	80	80
7.5	79	79	79	78	79	79	79	80	80	80	79	79	79	79	79	79	79
10.0	79	78	78	78	78	78	78	79	80	79	79	78	78	78	78	78	79
12.5	78	77	77	77	77	78	78	78	79	78	78	78	78	77	77	77	78
15.0	77	76	76	76	77	77	77	78	79	78	77	77	77	77	76	77	77
17.5	76	75	75	76	76	76	76	77	78	77	77	77	77	76	76	76	76
20.0	75	74	74	75	75	76	76	76	77	76	76	76	76	75	75	74	75
22.5	74	73	73	74	75	75	75	75	76	75	75	75	75	75	74	73	74
25.0	73	72	72	73	73	74	74	74	75	74	74	75	74	74	73	72	73
27.5	72	71	71	71	72	72	73	73	74	73	73	73	72	72	72	71	72
30.0	70	69	70	70	70	71	72	71	73	72	72	71	71	71	71	70	70
32.5	69	68	68	68	69	69	70	70	71	70	71	70	69	69	69	68	69
35.0	67	66	67	67	67	68	69	69	70	69	69	68	68	67	67	67	67
37.5	66	65	65	65	66	66	67	67	68	68	67	67	66	66	66	65	66
40.0	64	63	63	63	64	64	65	66	67	66	66	65	65	64	64	64	64
42.5	62	61	61	62	62	63	63	64	65	64	64	64	63	63	62	62	62
45.0	60	60	59	60	61	61	62	63	63	63	62	62	62	61	60	60	60
47.5	58	58	57	58	59	60	60	61	61	61	60	60	60	60	59	59	58
50.0	56	56	56	56	57	57	58	59	59	59	58	58	58	57	57	57	56
52.5	54	54	54	54	55	55	56	57	57	57	56	56	55	55	55	54	54
55.0	52	51	52	52	52	53	54	54	55	55	55	54	53	53	53	52	52
57.5	50	49	50	50	50	51	52	52	53	52	52	52	51	51	51	50	50
60.0	48	47	47	48	48	49	50	50	51	50	50	49	49	49	49	48	48
62.5	46	45	45	45	46	47	47	48	49	48	48	47	47	46	46	46	46
65.0	43	43	43	43	44	45	45	46	46	46	46	45	45	44	44	44	43
67.5	41	41	41	41	42	43	43	44	44	44	43	43	43	42	42	42	41
70.0	39	38	38	39	40	40	41	41	42	42	41	41	40	40	40	39	39
72.5	37	36	36	37	38	38	39	39	39	39	39	39	38	38	38	37	37
75.0	34	34	34	35	36	36	37	37	37	37	37	37	36	36	36	35	34
77.5	32	32	32	33	34	34	35	35	35	35	35	35	34	34	33	33	32
80.0	30	30	30	31	32	32	33	33	33	33	33	32	32	32	31	31	30
82.5	28	28	28	29	29	30	30	31	31	31	31	30	30	30	29	29	28
85.0	26	26	26	27	27	28	28	29	29	29	29	28	28	28	27	27	26
87.5	24	24	24	25	25	26	26	27	27	27	26	26	26	26	25	25	24
90.0	22	22	22	23	23	24	24	25	25	25	24	24	24	23	23	23	22

Test Results – Candela Tabulation

The following table provides the tabulated Candela measurements:

	0.0	22.5	45.0	67.5	90.0	112.5	135.0	157.5	180.0	202.5	225.0	247.5	270.0	292.5	315.0	337.5	360.0
92.5	21	20	21	21	22	22	23	23	23	23	23	23	22	22	22	21	21
95	19	19	19	20	20	21	21	21	21	21	21	21	21	21	20	20	19
97.5	17	17	18	18	19	20	20	20	20	20	20	20	19	19	19	18	17
100	16	16	16	17	18	18	18	18	18	18	18	18	18	18	17	16	16
102.5	15	15	15	16	16	17	17	17	17	17	17	17	17	16	16	15	15
105	13	13	13	14	15	15	15	15	15	15	15	15	15	15	14	14	13
107.5	12	12	12	13	14	14	14	14	14	14	14	14	14	13	13	13	12
110	11	11	11	12	12	12	13	13	13	13	13	12	12	12	12	11	11
112.5	10	10	10	10	11	11	12	12	11	11	12	11	11	11	11	10	10
115	9	9	9	10	10	10	11	11	10	10	11	10	10	10	10	9	9
117.5	8	8	8	9	9	10	10	10	9	10	10	10	9	9	9	8	8
120	7	7	8	8	8	9	9	9	8	9	9	9	8	8	8	8	7
122.5	6	6	7	7	8	8	8	8	7	8	8	8	8	7	7	7	6
125	5	6	6	6	7	7	7	7	7	7	7	7	7	7	6	6	5
127.5	5	5	5	6	6	6	6	6	6	6	6	6	6	6	5	5	5
130	4	4	5	5	5	5	5	5	5	5	5	5	5	5	5	4	4
132.5	4	4	4	4	4	4	5	4	4	4	5	4	4	4	4	4	4
135	3	3	4	4	4	4	4	4	4	4	4	4	4	4	4	3	3
137.5	3	3	3	3	3	4	4	3	3	3	4	4	3	3	3	3	3
140	2	2	3	3	3	3	3	3	3	3	3	3	3	3	3	2	2
142.5	2	2	2	3	3	3	3	3	2	3	3	3	3	3	2	2	2
145	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2
147.5	1	2	1	2	2	2	2	2	2	2	2	2	2	2	2	2	1
150	1	1	1	1	2	2	1	2	1	2	1	2	2	2	1	1	1
152.5	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
155	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
157.5	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
160	0	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	0
162.5	0	0	1	1	1	1	1	1	0	1	1	1	1	1	1	1	0
165	0	0	0	0	0	1	1	0	0	0	1	1	0	0	0	0	0
167.5	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
170	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
172.5	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
175	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
177.5	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
180	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Photometric Testing Information

The sample was evaluated for photometric and electrical characteristics using an integrating sphere and a goniophotometer, each located in purpose-built, temperature and humidity-controlled, draft free environments.

The integrating sphere is a 65-inch diameter sphere manufactured by Labsphere (Model# LMS650) which exhibits a “ 4π geometry” configuration according to IES LM-79-08 and is applicable for all types of LED products (directional and non-directional light projections). Its spectroradiometer is an array-type detector manufactured and calibrated by Labsphere (Model# CDS600).

The integrating sphere uses self-absorption correction to eliminate errors due to mismatches between the standard reference lamp and the test samples being measured. The auxiliary lamp used to perform this task is a halogen type lamp powered by a calibrated *Lamp Power Supply* manufactured and calibrated by Labsphere (model LPS 200). Ambient temperature (for photometric analysis) is measured using a “J-Type” thermocouple located inside the integrating sphere at the same height as the sample under test and not more than 1 meter in horizontal distance away from the sample. The thermocouple is located behind the baffle of the photo detector in order to eliminate any direct optical radiation from the sample under test.

Luminaire Stabilization.

The sample was placed inside the integrating sphere and powered by a regulated and conditioned 120.0 Volt, alternating current supply. The correlated color temperature, color rendering index, chromaticity coordinates and electrical power measurements contained in this report are the numeric **averages** of the three readings upon which stabilization is verified. The stabilization times shown on the results pages of this report denote the time of the 1st measurement (of the 3 consecutive readings) since this is the minimum time that the sample is assumed to have taken to reach stabilization.

The integrating sphere is calibrated using a quartzline halogen lamp with the following specifications:

Manufacturer: Sylvania

Model# 75Q/CL-28V

Voltage = 28.0 Volt

Wattage = 75.0 Watts

Calibration Current = 2.679 Amperes

Luminous Flux = 1538.8 Lumens

Calibration Date = 8-18-2005 (calibrated by Labsphere – NIST traceable).

Continued.....

Photometric Testing Information (continued)

The goniophotometer is calibrated using a frosted tungsten filament FDS/DZE lamp with the following specifications:

Manufacturer: General Electric
 Part Number: CSB-110
 Bulb Number: 108-A
 Voltage: 24.0 Volts
 Wattage: 150.0 Watts
 Calibration Current: 4.799 Amperes
 Luminous Intensity: 150.3 Candelas
 Calibration Date: 4-14-2009 (NIST traceable)

A *Power Analyzer* was used to measure all electrical characteristics of the sample.

Equipment List:

Description	Manufacturer and Model Number	OnSpeX Instrument Reference Number	Calibration Due Date
Integrating Sphere 65"	Labsphere LMS650	IS100	N/A
Spectroradiometer	Labsphere CDS600	CDS600	5-20-2011
Auxiliary Lamp PSU	Labsphere LPS200	LPS200	2-16-2011
Power Analyzer	Voltech PM1000+	PA110	4-27-2011
Power Analyzer	Yokogawa WT210	PA107	3-23-2011
Regulated Power Supply	California Instruments 1001P	AC100	N/A
Regulated Power Supply	Chroma Instruments 61602	AC300	N/A
Thermometer (Thermocouple)	Fluke 52	TH100	8-04-2011

All equipment is calibrated by TMI (Technical Maintenance, Inc.) ISO / IEC 17025-2005 Accredited (Cert. 1378.01) except: Labsphere CDS600 and Labsphere LPS200 which is calibrated by Labsphere, USA.